

# POWERFLEX®

## PART NUMBER

# PF79-101W

## DESCRIPTION

## FRONT UPPER WISHBONE REAR BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

4 x Polyurethane Bushes	1 x PTFE/Silicone Grease
2 x Stainless Steel Sleeves	2 x Bearings
2 x Zinc Plated Mild Steel Washers	6 x Nylon Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original bush from the wishbone including its outer shell. The original spacing sleeves are no longer required.
2. Clean any dirt or corrosion from the bore of the arm, using a rounded file to remove any sharp edges.
3. Enclose the bearing in the two PU halves and push the assembled bush into the wishbone until flush both sides.
4. Insert the stainless steel sleeve into the bearing bush assembly.
5. Place two nylon washers over the sleeve on the chassis side of the arm and a single washer on the opposing end as shown in fig 1.
6. Refit the wishbone to the vehicle, adding the steel washer to the single nylon washer before the bolt is reintroduced.
7. Tension all hardware to the manufacturers recommended torque settings.



Figure 2

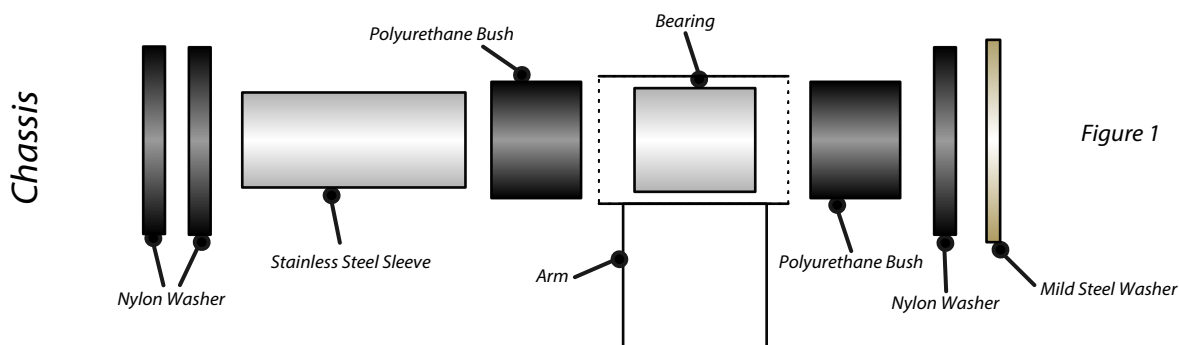


Figure 1