

POWERFLEX®

PART NUMBER
PF8-902

DESCRIPTION
Caterham 7 Front Upper Wishbone Front Bush

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane Bush	4 x DU Bearings
2 x M8 Bolt	2 x Nylocks
4 x Nylon Washers	2 x Small Stainless Steel Washers
2 x Large Stainless Steel Washers	1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original bush, including the outer shell, from the arm.

2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.

3. Press the DU Bearings into the larger bore of the bushes so that they sit flush.

4. Press bushes into the bore of the arm in the orientation shown in Figure 2 and apply a small amount of grease to the outer faces of the bushes.

5. Place nylon washer between the bracket and the bush face as shown in Figure 3, then fit arm to chassis. Place the larger steel washer next to the head of the M8 Bolt and the smaller washer on the opposite end. Secure in place using the supplied nylock.

6. When refitting to the vehicle, tension all hardware to manufacturers recommended torque settings.

Figure 1

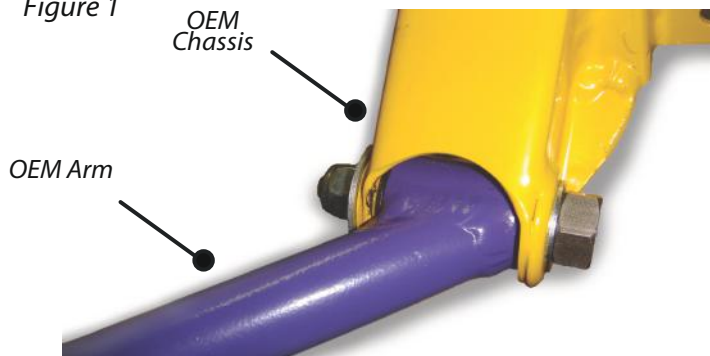


Figure 2

