

# POWERFLEX®

## PART NUMBER

# PFF19-1102G

## DESCRIPTION

### FRONT WISHBONE REAR BUSH CASTER INCREASE

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Pre-Assembled Bush/Bracket Assemblies

1 x PTFE/Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the front wishbones from the vehicle.
2. Remove the original bracket/bush assemblies from rear position of the wishbones.
3. Clean any dirt or corrosion from the 'pin' on the end of the wishbones.
4. Apply some of the supplied grease to the 'pin' of the wishbones and to the bore of the polyurethane bushes.
5. Fit the bush/bracket assemblies to the wishbones, making note of the orientation of the text. The larger flat face of the bush should face the front of the vehicle, and the engraved logo and text on the bracket should be upright when fitted to the car (Figure 1).
6. Refit the wishbones the car, ensuring to tighten all hardware to manufacturers recommended torque settings.
7. This product will increase the castor of the vehicle by 1°. Other wheel alignment parameters will be affected, so ensure the wheel alignment is checked and adjusted to desired settings.

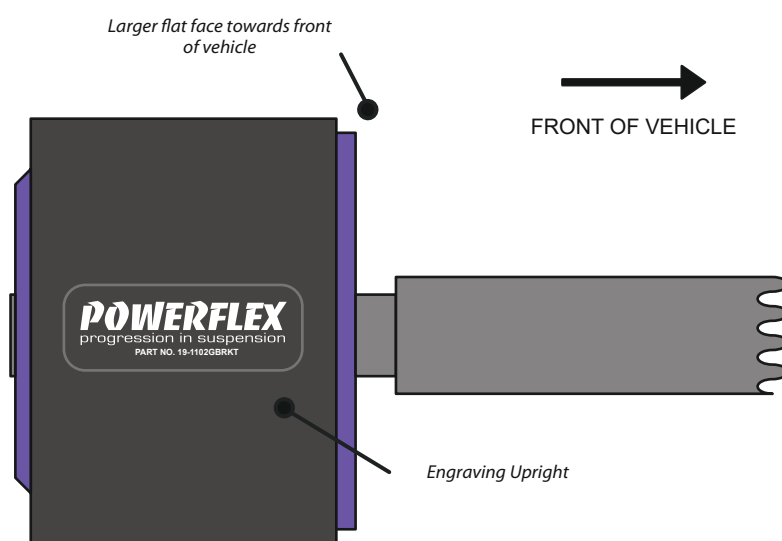


Figure 1