

# POWERFLEX®

## PART NUMBER

# PFF60-1101

## DESCRIPTION

### FRONT UPPER ARM INNER BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

- 4 x Polyurethane Bushes
- 1 x PTFE/Silicone Grease
- 4 x Stainless Steel Sleeves

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original rubber bush from the inner position in the front upper arm.
2. Clean any dirt and corrosion from the bore of the arm and file off any sharp edges.
3. Push the polyurethane bush into the bore of the arm so that it sits comfortably in the bore.
4. Apply some of the supplied grease into the bore of the polyurethane bush and push the stainless steel sleeve into the bore of the bush so that it sits flush inside.
5. Refit the front upper arm back to the vehicle and tension all hardware to manufacturers recommended torque settings.



Figure 2

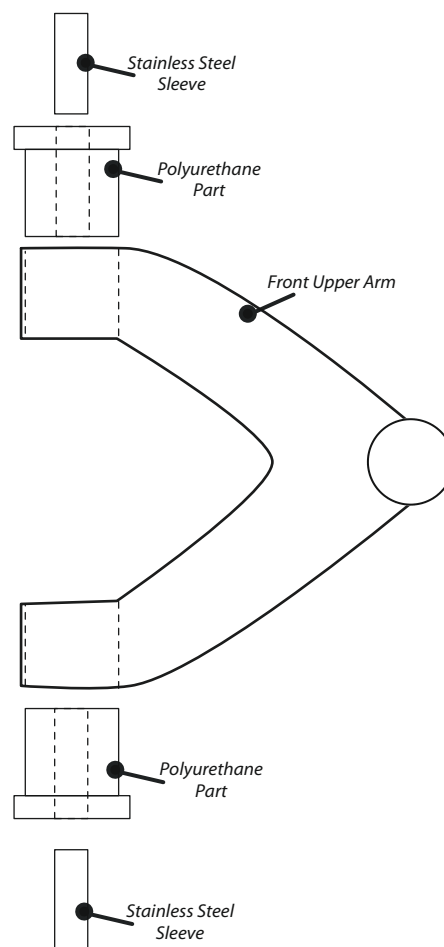


Figure 1