

# POWERFLEX®

## PART NUMBER

# 85-1604G

## DESCRIPTION

## Adjustable Front Upper Wishbone Bush

## INSTALLATION GUIDE

### Contents (parts per pack):

- 4 x Polyurethane A Bushes
- 1 x PTFE/Silicone Grease
- 4 x Polyurethane B Bushes
- 4 x Stainless Steel Sleeves
- 1 x 34-AF Spanner

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

### Fitting Instructions:

1. Remove the original bush from the arm.
2. Clean any dirt and corrosion from the bore in the arm. Remove any sharp edges from the bore of the arm.
3. Insert polyurethane B bushes (smaller lip) on the inside of wishbone arm, into the bore, see fig 1.
4. Insert polyurethane A bushes (larger lip) on the outside of wishbone arm, into the bore, see fig 1.
5. Apply grease into bore of the polyurethane bush.
6. Fit the stainless steel sleeves into bushes, that the large face of the sleeve sits against the B bush (smaller lip).
7. Using the included adjustable spanner rotate the sleeve to the desired amount of camber. Maximum camber is shown in figure 2.
8. Re-fit arm to the car and tension all hardware to manufacturers recommended torque settings.

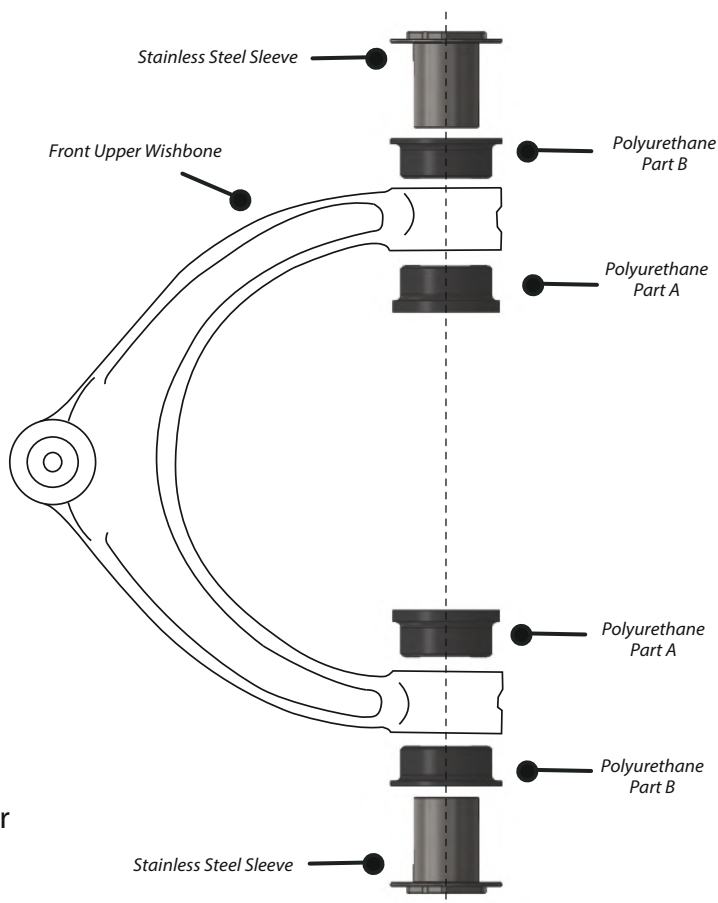


Figure 1

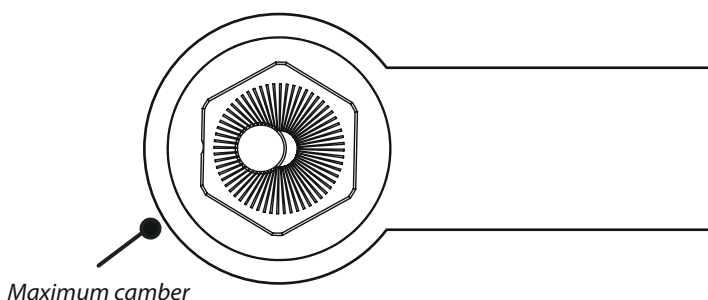


Figure 2